


# GTO CONTROL BOX SERIAL Rs232 PORTS

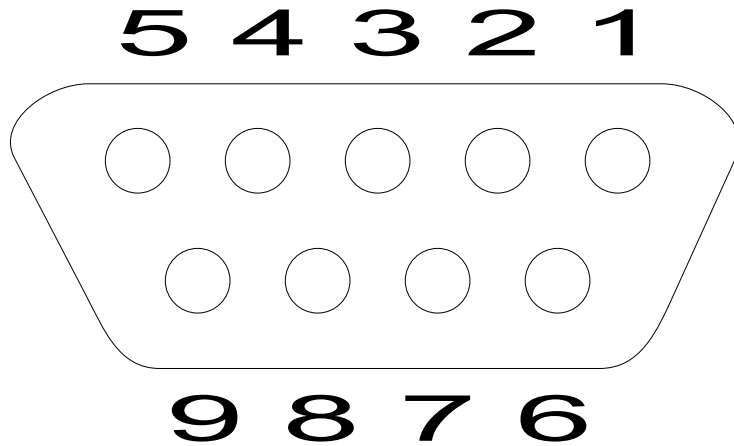

- 1 Empty
- 2 Transmit from Servo Drive
- 3 Transmit from Computer to Servo
- 4 Empty
- 5 Ground
- 6 Data Set Ready
- 7 Empty
- 8 Empty
- 9 Empty

Pins 2, 3, 5 & 6 are active.