



RS 422COR  
Adaptor

(B) MODEL RS 422COR

ST-6B

Notes:

RS422 (DB25P)		ST-6B (DB-9P)
Pin 2 (TX-)	to	Pin 3 (RX-)
Pin 14 (TX+)	to	Pin 7 (RX+)
Pin 5 (RX-)	to	Pin 2 (TX-)
Pin 17 (RX+)	to	Pin 6 (TX+)
Pin 7 (GND)	to	Pin 5 (GND)

Connect the shield of the cable to the metal shell at both ends.

- \*\* Place a 120 resistor between Pins 17 & 5 on the RS422 end
- \*\* Place a 120 resistor between Pins 3 & 7 on the DB-9P end

Santa Barbara Instrument Group Santa Barbara, California 93108		
Title Universal CPU /RS422 Extension Cable Schematic		
Size	Document Number	Rev <b>KG</b>
Date	September 16th, 1998	Sheet 1 of 1