

# White/UV Transilluminators

---

## *Instruction Manual*



---

**UVP, LLC**  
2066 W 11th Street, Upland, CA 91786  
Tel: (800) 452-6788 / (909) 946-3197  
Fax: (909) 946-3597

**Ultra-Violet Products Ltd.**  
Unit 1, Trinity Hall Farm Estate,  
Nuffield Road Cambridge CB4 1TG UK  
Tel: +44(0)1223-420022 / Fax: +44(0)1223-420561

Web site: [www.uvp.com](http://www.uvp.com)

81-0286-01 Rev B

## Introduction

The UVP Transilluminator offers the researcher uniform and intense sources of ultraviolet light (radiation) and white light in one unit. UV and white light 20x20cm filter areas side by side.

The special UV design emits high intensity excitation UV wavelength for back-illumination of transparent fluorescent materials. The UV back-illumination provides a highly sensitive method to detect double-stranded nucleic acids that have been labeled with fluorescent dyes such as ethidium bromide or acridine orange. Single stranded nucleic acids may be detected, but with excitation wavelength sensitive for nucleic acid visualization.

White light is used to illuminate coomassie blue, silver stain and protein gels.

The transilluminator is uniquely designed with increased UV intensity and uniformity, instant on capabilities, no lamp flicker and reduced electrical consumption.

**NOTE:** Though the manual refers to the midrange UV waveband as 302nm, others refer to this region as 300nm or 312nm. The spectral output of all these regions is the same.

**A Word of Caution:** UV Transilluminators are powerful sources of UV radiation that will cause damage to unprotected eyes and skin. Before operating any unit, be sure all personnel in the area are properly protected. If not using the transilluminator with an imaging system darkroom, a UV Blocking Cover should be attached to the transilluminator. Even though this cover blocks the ultraviolet radiation emitted by the unit, UV Blocking Eyewear should be worn as well.

The White/UV Transilluminator features:



## Specifications

### White/UV Transilluminators

White/UV Transilluminator models are designed with **white light and one or two UV wavelengths**. Units are equipped with a high efficiency electronic ballast. Dimensions: 13.25D x 19.13W x 5.64H in. (337 x 486 x 143mm)


<b>Model</b>	<b>Part Number</b>	<b>Volt/Hz</b>	<b>Wavelength</b>	<b>Filter Size</b>	<b>No. of Tubes /Watts</b>
TLW-20	95-0415-01	100-115/60	365nm	20 x 20cm	4 x 8W
	95-0415-02	230/50	White	20 x 20cm	2 x 8W
TMW-20	95-0415-04	100-115/60	302nm	15 x 15cm	4 x 8W
	95-0415-05	230/50	White	20 x 20cm	2 x 8W
LMW-20	95-0418-01	100-115/60	302/365nm	20 x 20cm	4 x 8W
	95-0418-02	230/50	White	20 x 20cm	2 x 8W

## Transilluminator Operation

### Safety Precautions

When the UV Blocking Cover is not being used, UV light may escape through the holes dedicated to accepting the bracket pins of the UV Blocking Cover.

- Remove the black safety plugs from their package
- Insert the safety plugs through the holes as shown.

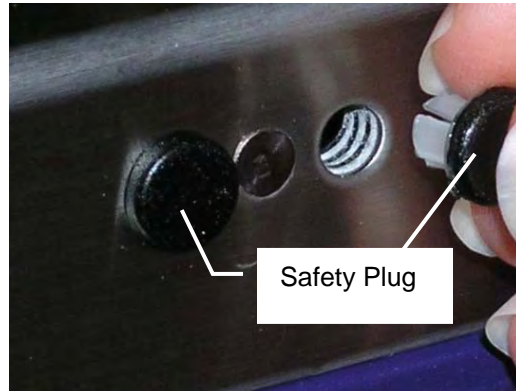

### Setting Up the Transilluminator

- Place the transilluminator on a level work surface. Be sure that an air space exists around the bottom of the work surface. This space allows for the proper air circulation through the unit.
- Plug the female end of the power cord into the transilluminator. For 230 volt models, or those requiring special power cord connectors, ensure that the proper configuration of male connector or plug has been properly connected to the power cord.
- Plug the male end of the power cord into a properly grounded electrical outlet. The proper voltage of the transilluminator is found on the product information label. If using the transilluminator with an imaging system, a jumper cable is required for connecting to the darkroom. Refer to the imaging system documentation for additional instructions.
- The transilluminator is equipped with a UV Blocking Cover. Remove the brown protective paper from the cover. Insert the bracket pins on the cover into the holes on the front of the transilluminator. The cover is adjustable to varying angles for access to the filter surface.

NOTE: Do not operate the unit without securing the cover. If the cover is missing, a UV Blocking Faceshield must be worn to avoid UV exposure to the skin. UV Blocking Eyewear should be worn even with the cover in place to avoid accidental UV exposure.

## Using the Transilluminator

Place gel/sample on the filter area. It is recommended that researchers place the gels on a Gel-Tray to protect the filter surface from cuts and scratches. It is recommended that gloves be worn to prevent skin contact with gel and staining agents.

- The transilluminator can be turned on with the wavelength selector knob pointing in any position. Press the ON/OFF switch to ON. The tubes within the unit will begin glowing beneath the filter.
- Dial the knob to the appropriate wavelength setting. After viewing the sample, turn the transilluminator off.

## Maintenance/Repair/Technical Assistance

---

### Cleaning and Care of the Transilluminator

Clean unit surface with a damp soft cloth or sponge. Never use abrasive cleaners (can damage the filter surface). To protect the filter glass and minimize moisture and liquids on the glass, it is recommended that you use a UV transmitting Gel-Tray. Refer to the Replacement Parts for ordering information.

### Replacing Tubes in the Transilluminator

- Disconnect the transilluminator from the electrical supply.
- Remove the filter cover: Use a Phillips head screwdriver to remove the four screws on the sides of the unit. Lift the filter cover off the unit.
- Remove the reflectors on the left and right side. Slide the reflectors up out of the unit.
- Remove the tube: Carefully rotate the tube and slide out of the socket. Replace with a new tube by sliding the tube into the socket and rotating into place. Insert the reflectors back into place and reattach the filter cover.

### Replacement Parts/Accessories

For replacement parts or components not shown here, please call UVP Customer Service or place of purchase. Please have the transilluminator model number available when you call.

<b>Replacement Part Description</b>	<b>Part Number</b>
Filter Assembly (LMW-20, TMW-20)	38-0189-05
Filter Assembly (TLW-20)	38-0189-08
Cover, UV blocking	19-0112-01
Tube, 8 Watt, 302nm midrange UV (FL8E)	34-0042-01 – Qty 4
Tube, 8 Watt, 365nm longwave UV (F8T5/BL)	34-0006-01 – Qty 4
Tube, 8 Watt, cool white (T8T5/CW)	34-0056-01 – Qty 2
Ballast, electronic universal voltage	42-0068-01
Fuse, 2 amp, 250V, Slo-Blo (all voltages)	56-0002-01 – Qty 2

<u>Accessories Description</u>	<u>Part Number</u>
Gel-Cutter	85-0002-01
Gel-Scooper	85-0006-01
Gel-Tray, UV Transmitting, Lg. 16.5"W x 10.5"D (42 x 27cm)	85-0005-01
Gel-Tray, High Performance UV Transmitting (25 x 26cm)	38-0296-03
Gel-Ruler, UV Fluorescing	85-0003-01
Spectacles, UV Blocking	98-0002-01
Goggles, UV Blocking	98-0002-02
Faceshield, UV Blocking	98-0002-04

## Technical Support

UVP offers technical support for all of its products. If you have any questions about the product's use or, operation, please contact UVP's offices at the following locations.

If you are in North America, South America, East Asia or Australia:

If you are in Europe, Africa, the Middle East, Western Asia:

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>■ <b>Call (800) 452-6788 or (909) 946-3197 Customer Service</b> regular business days, between 7 am and 5 pm PST</li> <li>■ <b>E-Mail:</b> info@uvp.com</li> <li>■ <b>Fax Customer Service:</b> (909) 946-3597</li> <li>■ <b>Write to:</b> UVP, LLC<br/>2066 W. 11th Street<br/>Upland, CA 91786 USA</li> </ul> | <ul style="list-style-type: none"> <li>■ <b>Call +44(0) 1223-420022 Customer</b> regular business days, between 9 am and 5:30 pm</li> <li>■ <b>E-Mail:</b> uvp@uvp.co.uk</li> <li>■ <b>Fax Customer Service:</b> +44(0)1223-420561</li> <li>■ <b>Write to:</b> Ultra-Violet Products Ltd.<br/>Unit 1, Trinity Hall Farm Est., Nuffield Rd.<br/>Cambridge CB4 1TG UK</li> </ul> |
|--|--|

**Note:** A **Returned Goods Authorization (RGA) number** must be obtained from UVP Customer Service before returning any product.

## Warranty

UVP, LLC warrants its Ultraviolet Transilluminators to be free of defects in materials and workmanship for a period of two (2) years from date of purchase. The foregoing warranty of UVP shall be of no force and effect if buyer has modified or damaged the product. Tubes and filters are warranted for 90 days.

All warranties or merchantability and fitness for any purpose and all other warranties, expressed or implied, except those expressly set forth herein, are deemed waived and excluded.

UVP's duty under the warranty is limited to replacement and/or repair of the defective part at the option of UVP, LLC. UVP shall not be liable for any expenses or damages incurred by the purchaser except as expressly set forth herein, and in no event shall UVP be liable for any special, incidental or consequential damages of any kind. This warranty does not supersede any statutory rights that may be available in certain countries.